


Comparison Chart

Kentledge Method Conventional

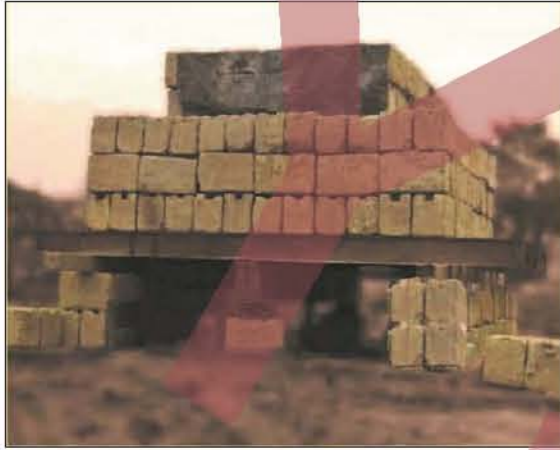

YJACK Method Innovative




Expensive	\$	Economical
Slow and Tedious	Hourglass	Fast and Simple
Large Working Platform	Building	Environmental Green
Limited Test Load	Crane	Unlimited Test Load
Not for Offshore Piles	Offshore rig	For All Types of Piles
Dangerous	Hard hat	Safe

Positioning Chart

Accuracy vs Cost

High Accuracy

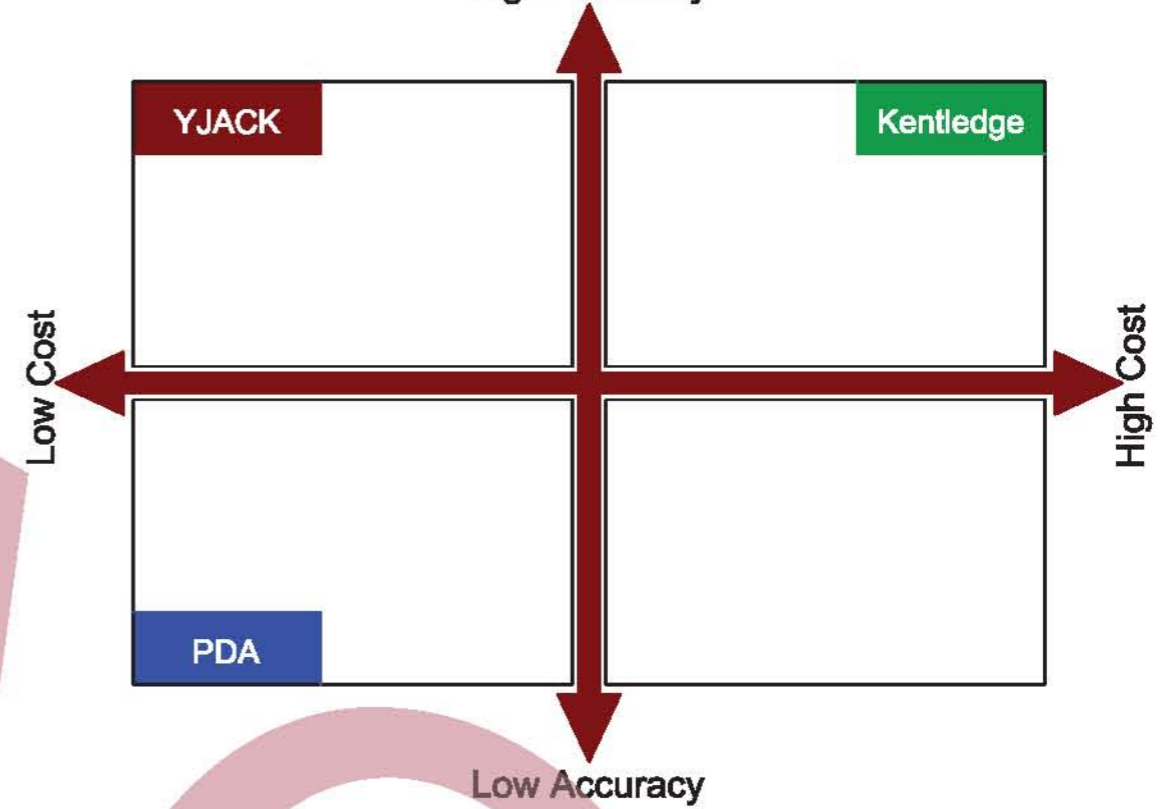

Accuracy vs Time

High Accuracy

